


# CUBE RIGHT ANGLE MOUNT INSTRUCTION SHEET

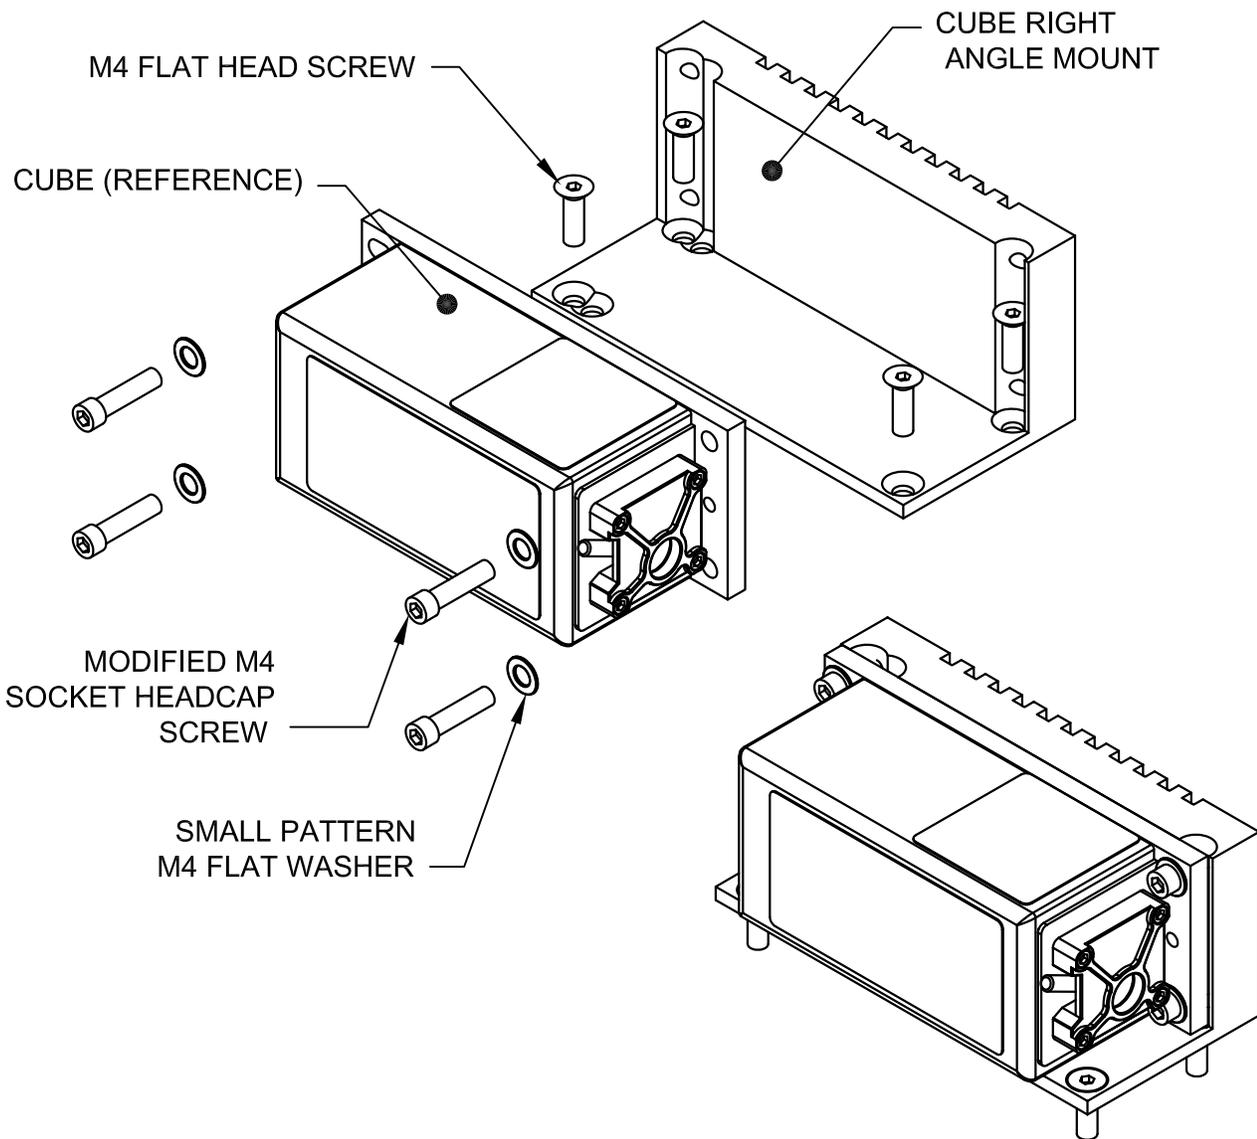

## INSTRUCTIONS:

1. ATTACH THE CUBE RIGHT ANGLE MOUNT TO DESIRED MOUNTING SURFACE USING THE FOUR M4 FLAT HEAD SCREWS PROVIDED.
2. ATTACH THE CUBE TO THE RIGHT ANGLE MOUNT USING THE FOUR SMALL PATTERN M4 FLAT WASHERS AND THE MODIFIED M4 SOCKET HEAD CAP SCREWS, BOTH PROVIDED.