

HighLight FL4000CSM-ARM Compact

Fiber Laser with Superior Brightness Center Beam and Adjustable Ring Mode (ARM)

The HighLight™ FL-ARM Compact series of industrial, multi-kilowatt fiber lasers delivers superior results in a variety of challenging welding tasks. Adjustable ring mode refers to the unique output beam from this laser, which consists of two independently controllable, co-axial beams from a single delivery fiber.

The HighLight™ FL4000CSM-ARM is available with an output power of 4 kW (1.5 kW center + 2.5 kW ring). The fiber center core has the nominal diameter of 22 μm (with 15 m fiber length) producing a smaller spot size as compared to its multi-mode counterpart. This laser extends the welding application areas over the standard single-mode fiber lasers, enabling it to weld “challenging” materials that were difficult or impossible to process in the past. These include thin (some tenths of a mm) substrates which do not tolerate high total heat input (e.g. foil to tab welding), and mixed materials having significantly different thicknesses and melting points.



FEATURES

- Output power: 4,000 Watts
- Adjustable Ring Mode (ARM)
- Excellent stability over the entire power range (1% to 100%)
- Inherently back reflection safe
- Industry-leading closed loop power control for high process consistency
- Optimized power profile programming tool for welding processes
- CleanWeld™ technology to optimize welding results



BENEFITS

- Reliable and fast welding process with high efficiency
- Superior welding seam quality with minimal heat affected zones
- Highest part quality with minimum reject rates
- Minimized operating costs

APPLICATIONS

- Welding of dissimilar materials such as copper and aluminum
- Welding of foil stacks with precise control
- Cutting




HighLight FL4000CSM-ARM Compact Datasheet

SPECIFICATIONS		HighLight FL4000CSM-ARM	
Nominal Power (W)		4,000	Center 1,500 / Ring 2,500
Power Range (%)		1 - 100	
Laser Beam Quality (BPP) at Collimator (mm x mrad)		Center ≤ 0.6	Ring ≤ 8
Power Stability (%)		± 1	
Pulse Frequency Range (kHz)		CW - 5	
Wavelength (nm)		1070 \pm 10	
ELECTRICAL RATINGS			
Voltage (VAC)		400/440/480 \pm 10%	
Connected Load (kVA)		12.7	
Effective Power at Nominal Power (kW)		12.5	
Max. Current Consumption at 400 V (A)		18	
Fuses Type NH (A)		32	
COOLING			
Recommended Cooling Capacity Laser & QHB/QD (kW)		8.9	
Flow Rate Laser (l/min)		70	
Flow Rate QHB/QD (l/min)		2	
Temperature Laser ($^{\circ}$ C)		25 \pm 1	
Temperature for QHB/QD ($^{\circ}$ C)		24 - 45	
Max. Pressure Laser (MPa)		0.5	
Max. Pressure QHB/QD (MPa)		0.4	
Typical Pressure Drop Laser (MPa)		0.25	
FIBER DELIVERY SYSTEM			
Interface		QHB/QD	
Diameter (μ m)		Center D 22, Ring OD 170	
Length (m)		15	
DIMENSIONS & WEIGHTS			
Laser Dimension L x W x H (mm) without signal tower		Midi: 794 x 916 x 824	
Laser Weight (kg)		< 350	
ENVIRONMENTAL CONDITIONS			
Ambient Temperature ($^{\circ}$ C)		5 - 40	
Humidity ($^{\circ}$ C)		Environmental conditions always below the dew point. Condensation to laser, QHB/QD and optics must be avoided during the operation, storage, and transport.	
CUSTOMER INTERFACE			
Digital Signals (V DC)		24	
Power Control (V DC)		0 - 10	
Gate Control (V DC)		24, rise/fall time < 30 μ s	
OPTIONS LASER			
		Field bus (Ethernet/IP, Profinet, Profibus, Devicenet, Ethercat), Scanner control interface, Multi station interface	

MECHANICAL SPECIFICATIONS

**Midi:
HighLight FL4000CSM-ARM**

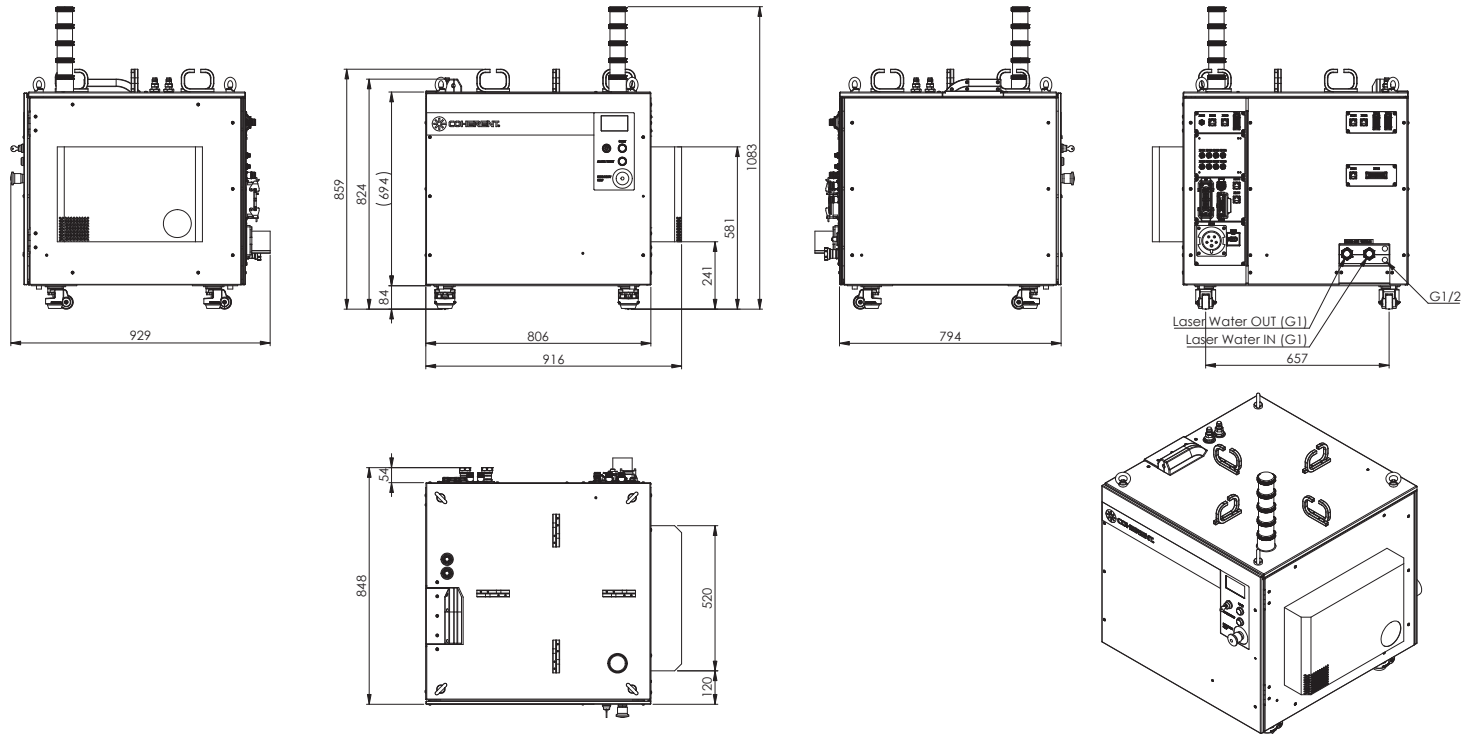


Coherent, Inc.,
5100 Patrick Henry Drive Santa Clara, CA 95054
p. (800) 527-3786 | (408) 764-4983
f. (408) 764-4646

tech.sales@Coherent.com www.Coherent.com

Coherent follows a policy of continuous product improvement. Specifications are subject to change without notice.

Coherent offers a limited warranty for all HighLight Lasers. For full details of this warranty coverage, please refer to the Service section at www.Coherent.com or contact your local Sales or Service Representative.
MC-021-20-0M0520 Copyright ©2019 Coherent, Inc.

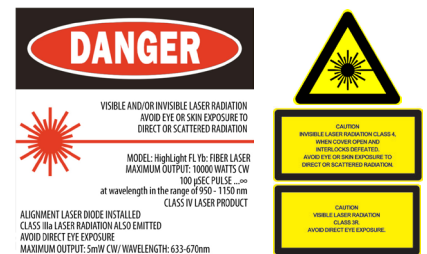

Coherent industrial lasers are designed in strict accordance with the respective safety regulations. We certify that each laser manufactured by our company complies with FDA Radiation Performance Standards, 21 CFR Subchapter J and with IEC 60825. Warning labels as shown in the figure appear on each Coherent laser to indicate the respective classification.